




595 STEPPER PEDOMETER INSTRUCTIONS

FEATURES:

- ACCURATELY COUNTS STEPS UP TO 99999
- DURABLE BELT CLIP

KEY REFERENCES

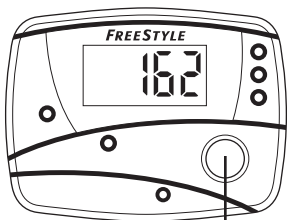

RESET

MOUNTING THE PEDOMETER

Attach the pedometer securely to your waistband or belt, close to the center of your body. The unit should be positioned horizontally along the waist.

Correct



Incorrect



STARTING THE MEASUREMENT

Start the measurement by pressing the "RESET" key, you can always see the step counter before you press the "RESET" key again.

TROUBLESHOOTING

Not all of your steps were detected - mount the pedometer closer to the center of your body.

If the LCD is showing slow response - temperature has been below 0 degrees, the display returns to normal when the temperature rises.

If the LCD is black- the pedometer has been put in direct sunlight too long. It will return to normal in the shade.

REPLACING THE BATTERY

When the display becomes blurry, this indicates that the battery power has nearly run out.

To replace the battery, open the back cover by removing the screws with a screwdriver. Replace the battery then screw down the back case before use.

WARRANTY INFORMATION

Freestyle® products are warranted to the original purchaser to be free from defects in material and workmanship under normal use for a period of one(1) year from the date of purchase. During the warranty period, and upon proof of purchase, the product will be repaired without charge for either parts or labor, excluding the battery. The limited warranty is given by Freestyle and not the dealer from whom the product was purchased.

Should the product be defective, please return (postage paid) to:

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY. 11101

(718)-729-8890

Include a brief description of the problem and a copy of your purchase receipt showing it was purchased within the past year. Include your name, address and zip code. If the battery needs replaced, include a check or money order for \$4.00. Please allow 30 days for return.

This warranty will not apply if product has been misused, abused or altered. Bending the unit and visible cracking of the face or display are presumed to be defects resulting from misuse.

Visit our website at:
www.freestyleusa.com